

The Genuine. The Original.



OVERHEAD DOOR COMPANY OF
THE 7 RIVERS REGION, INC.

608-783-6080

www.overhaddoor7riversregion.com

CAUTION

During this programming the Door Operator could begin to run. Be sure to stay away from the moving door and its parts. To prevent the door from moving, close door then disconnect it from the Door Operator by pulling the Red Emergency Release Handle.

RESETTING KEYPAD

- Open cover on keypad half way.
- Press and hold "PROG" and "8" while fully opening cover.
- INDICATOR light will blink once and go out.
- Release the buttons and close cover fully.


PROGRAMMING KEYPAD

- Open cover fully.
- Press and release numbers 3 – 5 – 7 then press "PROG"
- The red light should be blinking about once a second
- Enter your PIN number (up to 8 digits) and press "PROG"
- Close cover fully.

Note: Wireless Keypad is now ready to signal your Door Operator. Your Door Operator must be programmed to accept the signal from your Wireless Keypad.

PROGRAMMING KEYPAD TO OPERATOR

Go to the garage and locate the antenna wire at the motor head, follow the antenna wire back to the motor & locate & PRESS the Learn Code Button.

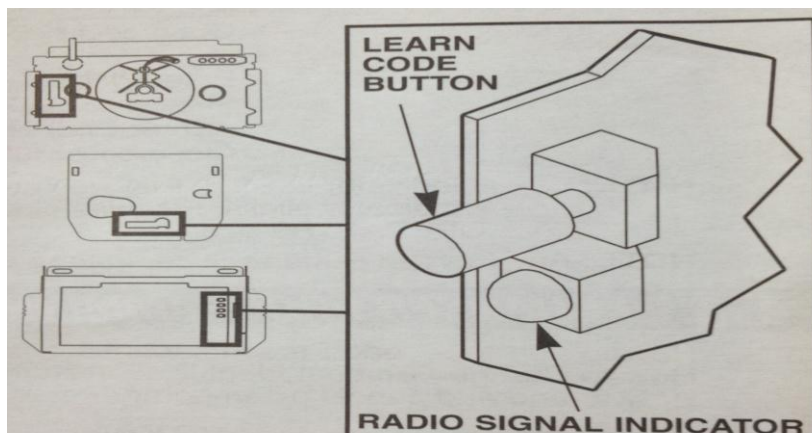

Immediately go back to the keypad and open cover fully.
Enter your PIN number and Press "SEND", "SEND", "SEND", "SEND".
Use the Emergency Release to reconnect Door to the Door Operator. Your system is now ready to use.

CodeDodger Keypad (old style)

